




— MODEL — PC-22D Electronic Pump Control Panel



PC-22D Pump Control Panel

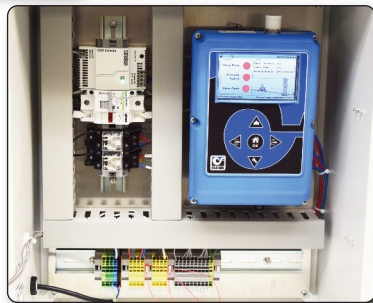

Inside the PC-22D

- Pre-programmed Valve Controller
- Suitable for all Booster Pump and Deep Well Applications
- Works with 60 Series and 131 Series Control Valves
- Electronically Control Open/Closing Speed of Control Valve
- Indicator Lights Monitor System Status
- NEMA 4X Rated Enclosure

The Cla-Val PC-22D provides control of the pump and pump control valve, preventing surges in the system when the pump starts or stops. It consists of a pre-wired electrical control panel employing a programmable valve controller to sequence the pump and pump control valve during all modes of operation. The programmable valve controller, which is housed in a NEMA 4X rated enclosure, provides protection to the pumping system from damage due to mechanical, hydraulic or power failure. The PC-22D offers all the control features found in the Cla-Val recommended wiring diagrams, plus alarms, automatic shutdown and adjustable timers.

System indicators provide local visual indicator of normal operation and alarm conditions. An externally mounted three position "Hand-Off-Auto" switch provides local or remote pump start/stop operation. The PC-22D is supplied with contacts for remote start, a pressure switch and a valve limit switch.


The Cla-Val PC-22D Electronic Pump Control Panel is manufactured to insure a minimum amount of field wiring. It is pre-programmed for most common pump control applications. Custom application programming is available upon request.

Features

- Controls single and dual chambered pump control valves
- Local visual indication of pump and control valve status
- Easy to adjust sequence timers
- Displays time for system to build pressure and for valve to open
- Contacts provided for remote or automatic start signal
- Operator interface buttons and reset switch
- Easy field wiring installation
- Automatic shutdown of pump in emergency situations
- Terminal block connections include – solenoid controls, valve limit switch, pump starter relay, remote automatic contact, pressure switch
- HOA switch for remote or local operation





Typical Application

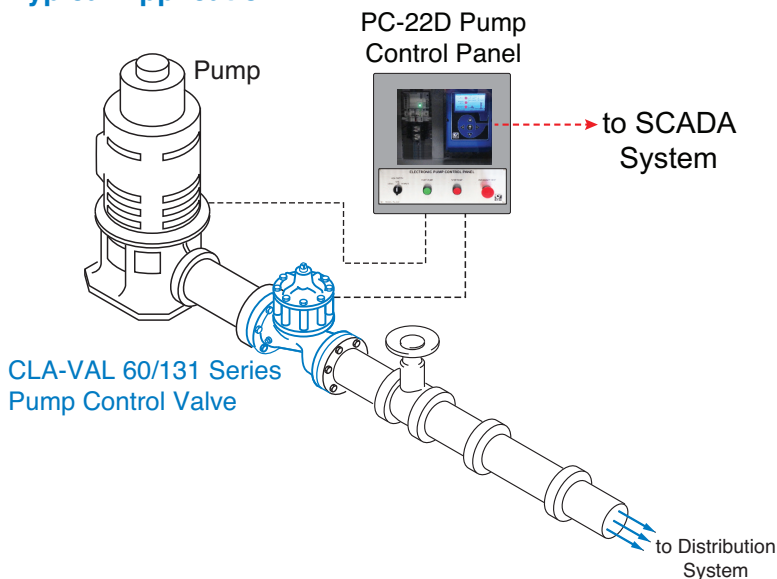


To minimize "in field wiring" the PC-22D is manufactured for most common pump control applications. The installation above shows the PC-22D being used with a Cla-Val Electronic Pump Control Valve.

Wiring Diagram

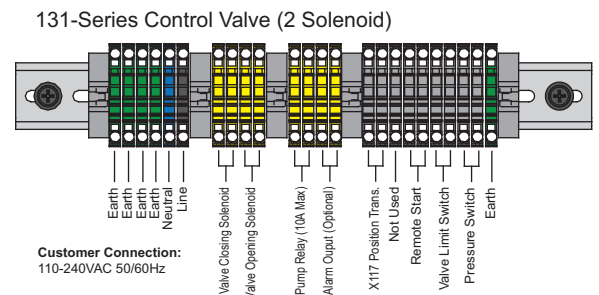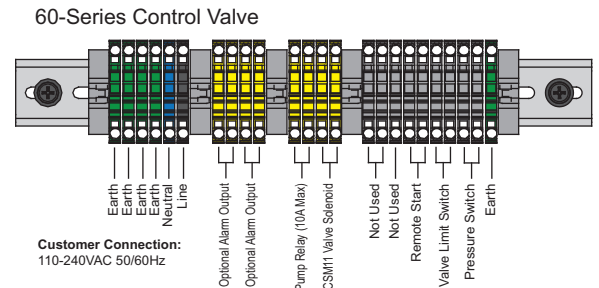

Operation

The PC-22D pump control panel functions as a pump and pump control valve controller that provides appropriate visual indication of system status throughout all modes of operation. Colored lights are provided to indicate normal operation and alarm conditions of the pump and control valve.

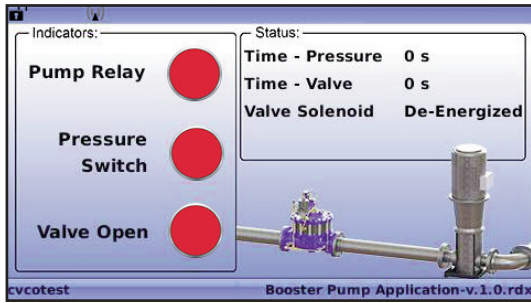

Visual Indications

1. Pump Status - Red = Pump Off, Green = Pump On
2. Pressure Switch Status - Red = Below Minimum, Green = Pressure OK
3. Valve Status - Red = Valve Closed, Green = Valve Open
4. Emergency Stop Status - Emergency stop enabled when displayed
5. System Failure Status - Indicates a system failure when displayed
6. Time for System to build Pressure - Displays time in seconds
7. Time for Valve to Open - Displays time in seconds
8. Valve Solenoid Status - Indicates whether the valve solenoid is energized or de-energized

Normal Pump Start (Hand or Auto)

A pump start command is initiated by turning the HOA switch to the "Local" position and pressing start or by a remote contact closure with the HOA switch in the "Auto" position; either of these operations will immediately turn on the pump & can be seen by the indicator on the controller screen.

The valve will not start to open until a pressure switch contact has been made, notifying the controller minimum system pressure has been established. If using a dual solenoid 131 control valve, an opening curve can be configured to open the control valve in a configurable amount of time. If using a 60 series control valve, the valve will fully open.

Once the opening sequence is complete, all system indicators can be seen in green.

Normal Pump Shutdown

A normal pump shutdown sequence is initiated by either depressing the stop button if in "local" mode or by opening the remote contact if using "remote" mode. By initiating this command, the pump control valve relay will open and cause the control valve to close. If using a 131 series valve, a control curve can be programmed to slowly close the valve in a configurable amount of time. Once the valve is fully closed, the pump contact will open and shut down the pump.

Pump Malfunction

Anytime during the pump operation when the pump discharge pressure is not capable of satisfying the pressure switch setting, the visual indicator will turn red, this indicates a loss of pressure, the control valve will close and the pump motor contacts shall open to turn off the pump. A screen indicator will display "System Failure", and a manual reset of the emergency stop switch will be required to clear the fault and reset the system.

Valve Malfunction

If the solenoids of the pump control valve fail, or if any other event should cause the valve to close without a normal pump shutdown command, the pump contact shall open turning the pump off. A screen indicator will display "System Failure", and a manual reset of the emergency stop switch shall be required to clear the fault and reset the system.

Timers

The PC-22D Electronic Pump Control Panel is supplied with a built-in pressure and valve opening sequence timer. Once the pump has turned on, if pressure does not meet the minimum operating system pressure or the control valve does not open within this configurable amount of time the pump contact shall open turning the pump off. A manual reset of the emergency stop switch shall be required to reset the fault.

Specifications

Construction

NEMA 4X fiberglass enclosure with polycarbonate window, gasketed door, stainless steel twist/latch door fasteners.

Power

120VAC @ 60Hz protected with 5 Amp Fuse & Circuit Breaker

Inputs

Dry Contact Inputs:

- Remote Start Command
- Valve Limit Switch Signal
- Discharge Pressure Switch Signal
- Local Start Pump Command
- Local Stop Pump Command
- Emergency Stop Command

Analog 4-20mA Inputs:

(6) Available

Outputs

Pump Start Relay:

- 10 Amp Max

Control Valve Relays:

- 60 Series Valve - (1) 120VAC @ 60Hz Output
- 131 Series Valve - (2) 24VDC Solid State Relay Output

Alarm Relay:

- (2) Available & Configurable

Analog 4-20mA Output:

- (4) Available

Timers

Pressure Timer - Allowable time for pump to build pressure.

Valve Open Timer - Allowable time for control valve to open.

Open & Closing Valve Curves


If using a 131 Series Control Valve, a graphical function can be used to specify exactly how the valve opens & closes.

Communication:

- Modbus TCP/IP
- Modbus RTU
- VNC

Temperature Range:

- -10 to 70° C
- 14°F to 158°F

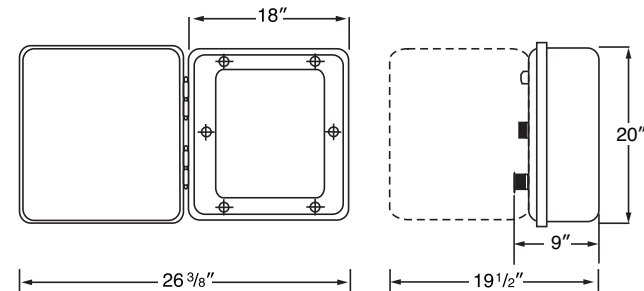

CLA-VAL

1701 Placentia Avenue • Costa Mesa, CA 92627

800-942-6326 • Fax: 949-548-5441 • Web Site: cla-val.com • E-mail: info@cla-val.com

CLA-VAL CANADA

4687 Christie Drive
Beamsville, Ontario
Canada L0R 1B4
Phone: 905-563-4963
E-mail: sales@cla-val.ca

CLA-VAL EUROPE

Chemin des Mésanges 1
CH-1032 Romanel/
Lausanne, Switzerland
Phone: 41-21-643-15-55
E-mail: cla-val@cla-val.ch

CLA-VAL UK

Dainton House, Goods Station Road
Tunbridge Wells
Kent TN1 2 DH England
Phone: 44-1892-514-400
E-mail: info@cla-val.co.uk

CLA-VAL FRANCE

Porte du Grand Lyon 1
ZAC du Champ du Pérrier
France - 01700 Neyron
Phone: 33-4-72-25-92-93
E-mail: cla-val@cla-val.fr

CLA-VAL PACIFIC

45 Kennaway Road
Woolston, Christchurch, 8023
New Zealand
Phone: 64-39644860
www.cla-valpacific.com
E-mail: info@cla-valpacific.com